


## MICROPHONE SWITCH

The microphone switch (1) is located at the right of the lighting switch. The speaker can be used when the ignition switch is set to the "ON" position and the microphone is plugged into the microphone jack (2). The volume can be adjusted with the volume control knob (3) at the rear of the amplifier.

**NOTE:** When removing the microphone, hold the microphone jack. Do not remove by pulling on the cord. (See the illustration )

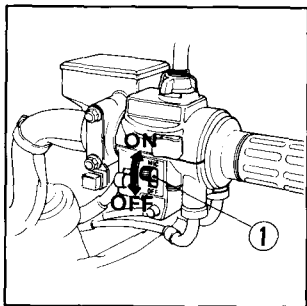

## INTERRUPTOR DE MICROFONO

El interruptor de micrófono (1) está situado a la derecha del interruptor de iluminación.

Puede usarse el altavoz cuando el interruptor de encendido es regulado en la posición "ON" (enc) y el micrófono es enchufado en su caja (2).

Puede regularse el volumen mediante el control de volumen (3) que está al fondo del amplificador.

**NOTA:** Al retirar el micrófono, sostenga su caja (jack). No lo retire tirando de la cuerda. (vea la ilustración)

