


## Steering Lock

The steering can be locked when the ignition switch (1) is in "LOCK" position.

Turn the handlebar all the way to the steering stop, either to the left or right, insert the key at the "OFF" position turn it counterclockwise to "P" or "LOCK" position while pushing in and then remove the key. To unlock, only turn the key clockwise.

(G. ED)

To lock the steering, turn the handlebars all the way to the right turn the key (1) to "P" or "LOCK" while pushing in. Remove the key.

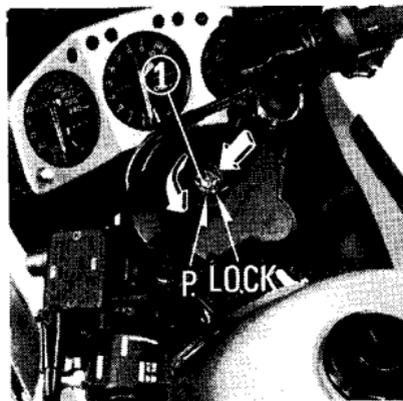

---

## Verrouillage du guidon

Le guidon peut être verrouillé lorsque l'interrupteur d'allumage (1) est mis sur la position "LOCK". Tourner le guidon à fond jusqu'à ce qu'il s'arrête sur la gauche ou la droite, introduire la clé à la position "OFF" tourner la clé dans le sens inverse des aiguilles d'une montre sur la position "P" ou "LOCK" en l'enfonçant, puis retirer la clé. Pour débloquer, tourner simplement la clé à droite.

(G. ED)

Pour bloquer la direction, tourner le guidon à fond vers la droite et tourner la clé de contact (1) sur la position "P" ou "LOCK" en la poussant dans le contacteur. Retirer le clé du contacteur.