


## Final Drive Gear Oil

Place the motorcycle on the center stand and check the level by removing the oil filler cap (1). Check that the oil reaches a level between the two bosses (2) on the inner housing (visible below the lower edge of the inspection hole). Add oil to the neck if necessary.

### Final drive gear oil change:

1. Remove the oil filler cap (1).
2. Place drain pan under the final drive gear case and then remove the drain plug (3).

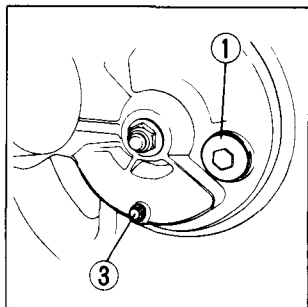

## Huile engrenages de réductions finales

Appuyer la motocyclette sur la béquille centrale et vérifier le niveau d'huile en enlevant le bouchon du trou de remplissage (1). S'assurer que le niveau d'huile se trouve entre les deux bossages (2) du carter intérieur (visibles sous le bord inférieur de l'orifice de visite). Ajouter de l'huile, s'il est nécessaire.

### Changement de l'huile engrenages de réduction finales:

1. Enlever le bouchon du trou de remplissage (1).
2. Disposer un récipient sous le carter d'engrenages de réductions finales, ensuite, enlever le bouchon de vidange (3).

