


Front Brake Brake fluid:

The brake fluid level in the reservoir must be maintained between the upper (1) and lower (2) level marks. Whenever the level falls near the lower level mark, check the brake pad as for wear (see page 144). If the brake pad wear does not exceed the limits, this will usually indicate a fluid leak. Consult nearest your Honda dealer.

Recommended brake fluid: DOT 3 or DOT 4

CAUTION:

- Handle brake fluid with care because it can damage paint and electric wires.
- Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.

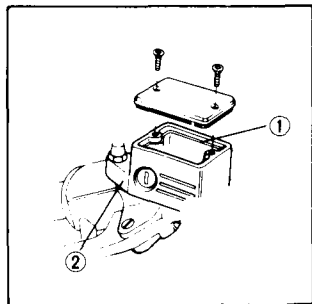

Frein avant

Liquide de frein:

Le niveau de liquide de frein du réservoir doit être maintenu entre les repères haut (1) et bas (2). Toutes les fois que le niveau tombe au-delà du repère du niveau bas, vérifier l'état d'usure des plaquettes de frein (voir page 144). Si l'usure des plaquettes de frein ne dépasse pas la limite, ceci indique d'habitude une fuite du liquide. Dans un tel cas, consulter votre concessionnaire HONDA le plus proche. Liquide de frein recommandé: DOT 3 ou DOT 4

PRECAUTION

- Manipuler le liquide de frein avec précautions car il peut endommager la peinture et les fils électriques.
- Ne jamais laisser de substances étrangères (saleté, eau etc.) pénétrer dans le réservoir de liquide de frein.