


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable by removing the speedometer cable set screw.
3. Remove the right caliper assembly (1) from the fork leg by removing the fixing bolts (2).
4. Remove the front axle holding bolt (3). Unscrew and pull out the front axle (4). Remove the front wheel.

NOTE: Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

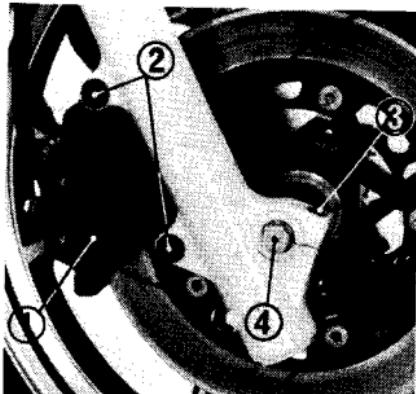

Dépose de la roue avant

1. Soulever la roue avant au-dessus du sol en plaçant une cale de support sous le moteur.
2. Désaccoupler le câble du compteur de vitesse après avoir retiré sa vis de fixation.
3. Déposer l'ensemble d'étrier droit (1) de la patte de fourche en retirant les boulons de fixation (2).
4. Retirer le boulon de maintien de l'axe de roue avant (3). Dévisser l'axe de roue avant (4) et le retirer.
Déposer la roue avant.

NOTE: Ne pas serrer le levier de frein lorsque la roue ne se trouve pas sur la machine. Le piston d'étrier sortirait du cylindre, ce qui provoquerait des pertes de liquide de frein. Dans un tel cas, une intervention sur le circuit de freinage sera nécessaire. Confier cet entretien au concessionnaire Honda agréé.