

Fuel Valve


The fuel tank has its fuel valve (1) located under the left side.

With the valve set in OFF, fuel supply is cut off.

The valve should be set to this position when the motorcycle is parked.

Turn to ON (straight down) for normal riding (gasoline will flow to the carburetors).

Turning the fuel valve to the RES position allows fuel to flow from the reserve supply. The reserve fuel supply is approximately 1.5 lit. (0.4 US gal., 0.3 Imp. gal.).

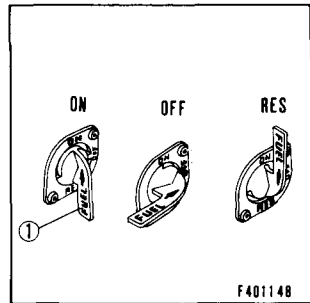

Grifo de combustible

El depósito de combustible está dotado de un grifo de combustible (1) situado debajo de su lado izquierdo. Con el grifo colocado en posición OFF, la alimentación del combustible estará cortada.

El grifo deberá colocarse en esta posición al estacionar la motocicleta.

Coloque el grifo en posición ON (hacia abajo) para la conducción normal (la gasolina circulará hacia el carburador.).

Gire el grifo de combustible hasta la posición RES y correrá el combustible del depósito de reserva. El suministro del combustible de reserva es de 1.5 litros, aproximadamente.