


Oil change and oil filter cleaning:

Drain the oil while the engine is still warm.

1. Remove the oil filler cap.
2. Place an empty oil drain pan under the engine and then remove the oil filter cap (1).
3. Operate the kickstarter several times to aid in complete draining of the remaining oil.
4. Remove the filter screen (2) and wash it in clean solvent.
5. Install the filter screen (2), spring and oil filter cap (1).

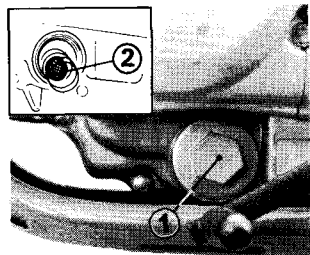

Cambio de aceite y limpieza del filtro de aceite:

Drene el aceite mientras que el motor esté todavía caliente.

1. Quite la tapa del orificio de llenado de aceite.
2. Coloque un recipiente de aceite vacío debajo del motor y quite la tapa del filtro de aceite (1).
3. Haga jugar el pedal del kickstarter varias veces para purgar completamente el resto del aceite.
4. Quite la malla del filtro (2) y lávela en una solución detergente limpia.
5. Remonte la malla del filtro (2), el resorte y la tapa del filtro de aceite (1).