


Spark Plug

Specified spark plug: NGK D8ESL or ND X24ES

1. Remove the spark plug lead and take out the plug with the special wrench provided in the tool kit.
2. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.
3. Regap to 0.6 – 0.7 mm (0.024 – 0.028 in.) (1). Measure with a feeler gauge and adjust by bending the side electrode (2) only. Do not overtighten.

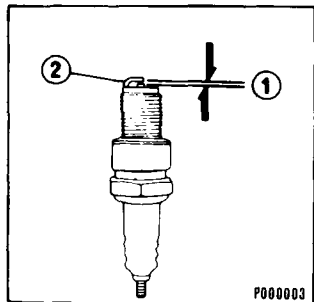

Bujía

Bujía del encendido especificada: NGK D8ESL o ND X24ES

1. Quite el conductor de la bujía y saque la bujía mediante la llave especial provista en la bolsa de herramientas.
2. Inspeccione los electrodos y partes en porcelana situadas en el centro para ver si haya depósitos, erosión o suciedad de carbón. Reemplace la bujía si esté excesivamente corroída o manchada. Utilice una escoba de bujía para la limpieza de la bujía o un cepillo de alambre; luego, limpie con un solvente y séquela.
3. Reajuste la separación de los electrodos a 0,6 – 0,7 mm (1). Médala con un calibre de espesor, y ajústela doblando el electrodo lateral (2) sólo. No apriete excesivamente.