


Brakes

Front brake adjustment:

Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the distance the front brake lever must be moved before the brake starts to engage. Free play, measured at the tip of the brake lever, should be maintained at 20–30mm (0.8–1.2 in.). Major adjustments should be made using the lower adjuster (1) at the front wheel. Minor adjustments can be made with the upper adjuster (2) on the brake lever.

To adjust, loosen the lock nut (3) and turn the adjuster (1) or (2). Turning the adjuster in direction (A) will decrease the free play.

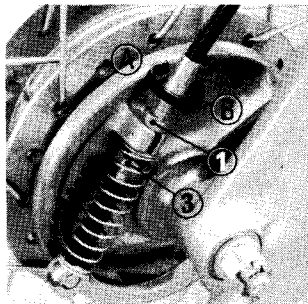

Frenos

Adjuste del freno delantero:

Levante la rueda delantera del suelo colocando un bloque de soporte debajo del motor, haga girar la rueda delantera a la mano y mida el juego libre de la palanca de freno delantero.

El juego libre, medido a la extremidad de la palanca de freno, deberá mantenerse de 20–30 mm. Los ajustes mayores deberán efectuarse utilizando el ajustador inferior (1) para la rueda delantera. Los ajustes menores podrán efectuarse con el ajustador superior (2) para la palanca de freno. Para ajustar el freno, aflojar la tuerca fijadora (3) y hacer girar el ajustador (1) o (2). Gire el ajustador en la dirección de (A) y se reducirá el juego libre.

