


## Fuse Replacement

The fuse holder (1) is located behind the left side cover. The recommended fuse is 10A.

The spare fuse (2) is attached inside the right side cover.

When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

**WARNING:** Never use a fuse with a different rating from that specified on the fuse holder and never use conductive material to replace a fuse.

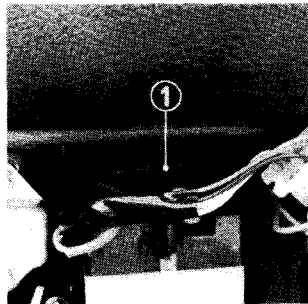

---

## Reemplazo de fusibles

La porta fusibles (1) está situada detrás de la cubierta lateral izquierda. Los fusibles recomendables son los de 10A.

El fusible de repuesto (2) está montado en el interior de la cubierta lateral de derecha.

Cuando se produzca quemadura frecuente de fusibles, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

**PRECAUCION:** No utilice nunca un fusible que tenga un otro régimen que lo especificado en la porta fusibles, nunca utilice otro material conductor en lugar de un fusible.

