

Ignition Switch


The ignition switch is located directly below the indicator panel.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

OFF: All electric circuits open. Engine cannot be started. Key can be removed.

P (PARKING AND STEERING LOCK): All electric circuits open except for taillight, position light and the steering can be locked. Key can be removed.

LOCK (STEERING LOCK)

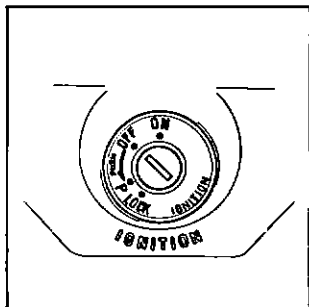

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

P (ESTACIONAMIENTO Y TRABADO DE LA DIRECCION): Todos los circuitos eléctricos se abren a excepción de aquellos para la luz de cola, luz de posición y trabado de la dirección. Se puede retirar la llave.

LOCK (BLOQUEO DEL MANUBRIO)