

## Brake servicing

Free play, measured at the tip of the brake lever, should be maintained at 1 – 5mm (0.04 – 0.2 in).

Adjusting nut ① is located behind the steering wheel.


After adjustment, tighten the lock nut securely and cover the nuts with a boot properly.

## Fuel line inspection

Check the fuel line for leakage, cracks, and loose connections. Replace if necessary.

## Fuel Filter Inspection

Check the fuel filter ② for blockage and replace if necessary.

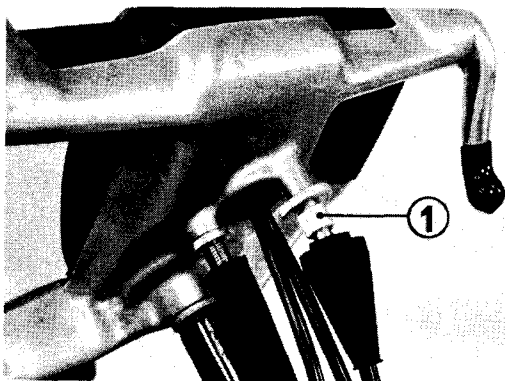

## Entretien du frein

Le jeu libre mesuré à l'extrémité du levier de frein, devrait être gardé à 1 – 5mm (0.04 – 0.2po).

L'écrou de réglage ① est situé derrière la poignée de direction.

Après le réglage, serrer à fond le contre-écrou et couvrir l'écrou correctement avec un soufflet.

## Vérification de la canalisation d'essence

Vérifier la canalisation d'essence au cas de fuite, fissures, et raccords desserrés.

Remplacer si nécessaire.

## Contrôle du filtre à essence

Vérifier si le filtre à essence ② n'est pas obstrué et le remplacer s'il y a lieu.

