

2. Remove the light assembly from the headlight housing by pulling the light assembly as shown and disconnecting the connector ④.
3. Remove the rubber cover ⑤ and the bulb retainer ⑥.
4. Replace the bulb ⑦.

NOTE:


Direct the "TOP" marks upward for installation.

5. To reinstall, reverse the above procedure.

Taillight maintenance

Loosen the three 5 mm screws ① to remove the lens ②.

Remove the bulb ③ as shown.

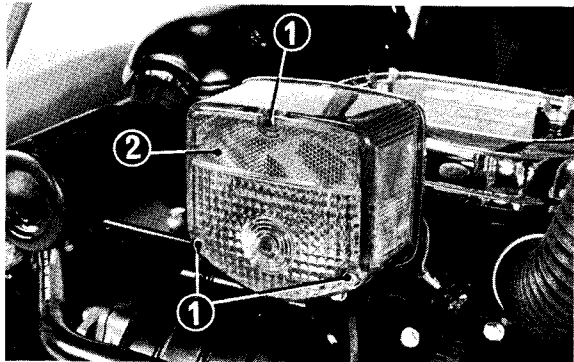

2. Déposer le bloc optique du cuvelage en tirant le bloc optique comme le représente la figure et en désaccouplant le connecteur ④.
3. Déposer le capuchon en caoutchouc ⑤ et la pièce de retenue de l'ampoule ⑥.
4. Remplacer l'ampoule ⑦.

REMARQUE:

Pour la repose, tourner les repères "Top" vers le haut.

5. Pour la repose inverser l'ordre de la dépose.

Entretien des lanternes arrière

Desserrer les trois vis de 5 mm ① pour déposer le diffuseur ②.

Déposer l'ampoule ③ comme le représente la figure.

