

Ignition Switch (ED type)


The ignition switch is located directly below the indicator panel.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

ACC: All electric circuits are off except for ACC terminal. Key cannot be removed.

OFF: All electric circuits open. Engine cannot be started. Key can be removed.

P (PARKING): All electric circuits open except for taillight, position light and ACC terminal. Key can be removed.

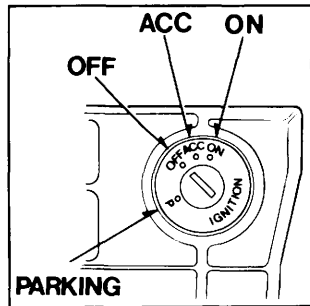

Interruptor del encendido (Typo ED)

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

ACC: Todos los circuitos eléctricos estarán abiertos menos el del terminal ACC. No se puede retirar la llave.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están cerrados, excepto el de las lámparas traseras, el de la lámpara indicadora de posición y el del terminal ACC. Se puede retirar la llave.