


Preset Buttons (6):

You can preset four AM stations and four FM stations. AM stations are preset with the AM/FM stations are preset with the AM/FM band switch turned to AM, and FM stations are preset with the same switch turned to FM.

Clock Button (7):

With the ignition or radio power switch at ON or OFF, pressing this button will display the time.

To adjust the clock, press the clock button (7) to display time. Press and hold the memory button (5) while setting the minutes (manual search UP button 3) and hours (manual search DOWN button 4). Release the memory button and the time is set.

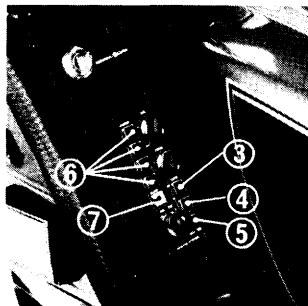

Botones de preselección (6):

Vd. puede preseleccionar cuatro emisoras de AM y cuatro emisoras de MF. Las emisoras AM se preseleccionan con el interruptor de banda AM/FM en la posición de AM y las emisoras de FM se preseleccionan con el mismo interruptor pero en la posición FM.

Botón del reloj (7):

Presionando este botón se indicará la hora, con el interruptor de alimentación del encendido o de la radio en ON u OFF.

Para regular el reloj, presione el botón del reloj (7) para indicar la hora. Presione y mantenga presionado el botón de memoria (5) mientras fije los minutos (botón UP de búsqueda manual 3) y las horas (botón DOWN de búsqueda manual 4). Suelte el botón de memoria y la hora estará fijada.