


## AIR PUMP ELEMENT

The air pump element (1) should be serviced at regular intervals (page 269).

1. Open the top compartment cover for access to the air pump element (1).
2. Separate the air pump cleaner housing (2) to remove the element.
3. Wash the element in clean non-flammable solvent and allow it to dry throughly.

**WARNING:** Never use gasoline or low flash point solvents for cleaning the air pump element. A fire or explosion could result.

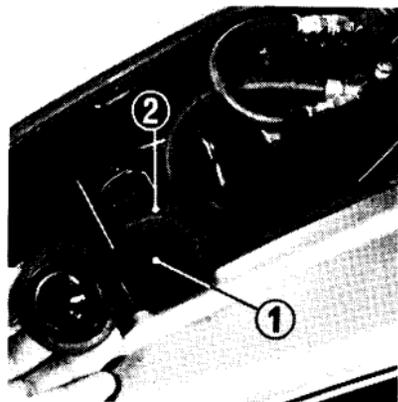

---

## PIEZA DE LA BOMBA DEL AIRE

La pieza de la bomba del aire (1) deberá revisarse de tiempo en tiempo (pág 269).

1. Abra la tapa del compartimento superior para tener acceso a la pieza de la bomba del aire (1).
2. Separe el alojamiento del limpiador de la bomba del aire (2) para retirar la pieza.
3. Limpie la pieza en una solución limpia no inflamable y dejelo secarse totalmente.

**ATENCIÓN:** Nunca use gasolina o disolvente de bajo punto de inflamación para limpiar la pieza de la bomba del aire. Puede provocarse fuego o explosión.