


### Trip Mode select button (3):

Pressing this button selects either Trip Mode (+) or (-). Trip mode (+) is used to count up mileage from 0 (zero) miles. Trip Mode (-) counts down from mileage preset by the rider until 0.0 miles has been reached, whereupon it enters Trip Mode (+) and begins to count up the mileage from 0 (zero) miles.

#### **NOTE:**

- While either mode is displayed, the other mode continues to count.
- If the ignition switch is turned from ON to any other ignition position, the count display will be memorized. However, if the battery is disconnected, the display memory will vanish and the tripmeter will display 0.0 (zero) after reconnecting the battery.

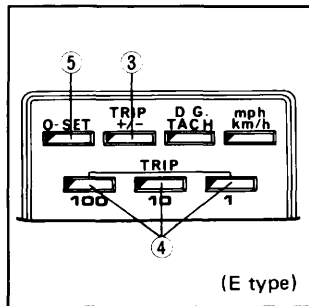

### Botón de selección de tipo de viaje (3):

Presionando este botón se selecciona bien el tipo de viaje (+) o el (-). El tipo de viaje (+) se utiliza para sumar las millas desde 0 (cero) kilómetros. El tipo de viaje (-) resta de las millas fijadas previamente por el motociclista hasta que se alcance 0,0, comenzando a funcionar entonces el tipo de viaje (+) y sumando los kilómetros desde 0 (cero).

#### **NOTA:**

- Mientras se indica uno de los tipos, el otro tipo sigue contando.
- Si el interruptor de encendido está en posición de encendido distinta a la de ON, la cuenta se memorizará. Sin embargo, si la batería está desconectada, la memoria desaparecerá y el cuentakilómetros para cada viaje mostrará 0,0 (cero) tras ser conectada la batería.