

Fuse replacement:

The fuse holders for the motorcycle's radio and cassette deck are located in the left fairing pocket. The specified fuses are:

Back up power supply: 7,5A


Radio/Cassette deck: 20A

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. In this case, the electrical system should be checked visually for damaged insulation or other possible faults. If the problem cannot be located visually, the motorcycle should be examined by an authorized Honda dealer.

WARNING: Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night or in traffic.

CAUTION: Turn the ignition switch and motorcycle radio and cassette deck switch OFF before checking or replacing the fuse to prevent accidental short-circuiting.

To replace the fuse, open the fuse holder and pull out the fuse, and discard it. Install a new fuse. (1) Fuse

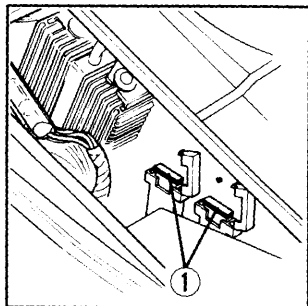

Cambio de fusibles:

Los portafusibles para la radio y el magnetófono de la motocicleta están situados en la bolsa del carenado izquierdo. Los fusibles especificados son:

Suministro de alimentación de apoyo: 7,5A

Radio/magnetófono: 20A (1) Fusible

Cuando se quemen frecuentemente los fusibles, esto indica generalmente un cortocircuito o una sobrecarga en el sistema eléctrico. En este caso, el sistema eléctrico debe comprobarse visualmente para ver si hay aislamientos dañados u otras faltas. Si el problema no puede localizarse visualmente, la motocicleta debe ser revisada por un concesionario autorizado de Honda.

ADVERTENCIA: No utilizar nunca un fusible de amperaje diferente al especificado. Esto podría resultar en serios daños del sistema eléctrico o incendios que a su vez, podrían causar una pérdida peligrosa de iluminación o potencia del motor durante la noche o en medio del tráfico.

PRECAUTION: Poner el interruptor de encendido y el de la radio y magnetófono en la posición OFF antes de comprobar o cambiar el fusible, para evitar cortocircuitos accidentales.

Para cambiar el fusible, abrir el portafusibles y sacarlo al exterior, luego tirarlo. Instalar un fusible nuevo.