


3. Remove the oil filler cap (3).
4. Place an empty oil drain pan under the engine and remove the oil drain plug (4).
5. With the ignition switch OFF, operate the kickstarter several times to aid in complete draining of the remaining oil.
6. After the oil has completely drained, make sure that the sealing washer is in good condition and reinstall the drain plug.
Drain Plug Torque: 25–35 N·m (2.5–3.5 kg·m, 18–25 ft·lb)
7. Fill with approx. 1.8ℓ (1.9 US qt, 1.7 Imp. qt) of recommended grade oil. Install the oil filler cap.

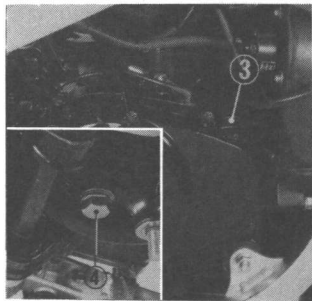

-
3. Enlever le bouchon d'huile (3).
 4. Mettre un récipient sous le carter moteur et enlever le bouchon de vidange (2).
 5. Faire jouer le kick de démarrage plusieurs fois afin de chasser le reste d'huile.
 6. Après la vidange complète de l'huile. S'assurer que la rondelle d'étanchéité est en bon état et remettre le bouchon de vidange.
Couple de serrage du bouchon de vidange: 25 à 35 N·m (2,5 à 3,5 kg·m)
 7. Remplir le carter d'huile de la qualité recommandée 1,8 litre environ. Mettre le bouchon de remplissage d'huile.