


Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNUNG: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

- | | |
|-----------------|---------------------|
| (1) Fuse box | (3) Main fuse |
| (2) Spare fuses | (4) Spare main fuse |

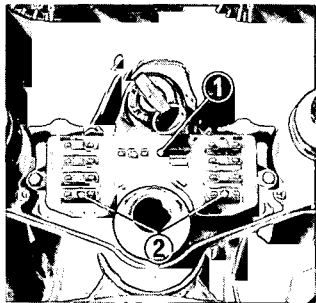

Remplacement des fusibles

La boîte de fusibles (1) se trouve entre le guidons. Le fusible principal est monté à côté de la batterie. Lorsque le fusible saute souvent, ceci indique un court circuit ou une surcharge du système électrique. Dans tel ca, consulter votre concessionnaire HONDA.

ATTENTION: Ne jamais utiliser des fusibles ayant une intensité différente de celle spécifiée sur la boîte de fusibles et ne jamais substituer des fusibles par les autres matériaux conducteurs.

- | | |
|--------------------------|-----------------------------------|
| (1) Boîte de fusibles | (3) Fusible principal |
| (2) Fusibles de rechange | (4) Fusible principal de rechange |

