


Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (page 98).

When riding in dusty areas, more frequent service may be necessary.

1. Remove the right and left side covers by pulling them out by hand.
2. Unlock the helmet holder (1) and remove the seat by pulling up on the seat lock lever (2).
3. Remove the fuel tank (see page 116).
4. Unscrew the three air cleaner case cover screws (3) and remove the cover (4).
5. Remove the air cleaner element (5) from the air cleaner case.

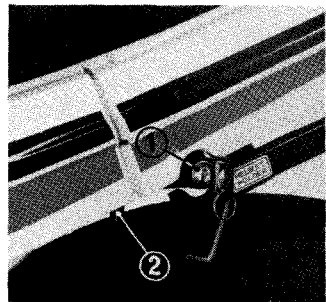

Entretien du filtre à air

Le filtre à air doit être entretenu à des intervalles réguliers (page 100).

Si la machine est utilisée dans des endroits poussiéreux, un entretien plus fréquent pourra être nécessaire.

1. Déposer les caches latéraux droit et gauche en les tirant à la main.
2. Déverrouiller le porte-casque (1) et déposer la selle en tirant sur le levier de verrouillage de la selle (2).
3. Déposer le réservoir d'essence (voir page 116).
4. Dévisser les trois vis du couvercle de boîtier de filtre à air (3) et déposer le couvercle (4).
5. Déposer l'élément filtrant (5) du boîtier de filtre à air.

