


Perform the oil change in the following manner. Drain the oil while the engine is still warm.

1. Remove the oil filler cap, engine bottom oil drain plug (4) and drain the oil.
2. Remove the under cowl (5) and radiator (6) by removing the fixing bolts (7).
3. Remove the oil filter (8) with a filter wrench and let the remaining oil drain out. Discard the oil filter.
4. Make sure that the sealing washer on the drain plug is in good condition and install the plug.

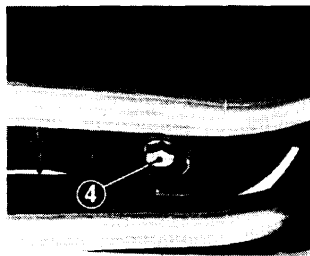

Renouveler l'huile de la façon suivante. Vidanger l'huile alors que le moteur est encore chaud.

1. Déposer le bouchon de remplissage d'huile, et le bouchon de vidange du carter moteur inférieur (4) et laisser l'huile s'écouler.
2. Déposer le carénage inférieur (5) et le radiateur (6) en enlevant les boulons de fixation (7).
3. Déposer le filtre à huile (8) avec une clé à filtre et laisser s'écouler l'huile restante. Mettre le filtre à huile au rebut.
4. S'assurer que la rondelle d'étanchéité du bouchon de vidange est en bon état et reposer le bouchon.

