


Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Loosen the drive chain adjuster lock nuts (1) and adjusting bolts (2).
3. Remove the stopper fixing bolts (3) from the end of the swing arm.
4. Loosen the rear axle nut (4), pull down the adjusting bolts (2) and remove the adjusting stoppers (5).
5. Push the wheel forward and remove the drive chain from the rear sprocket.
6. Pull out the wheel from the swingarm.

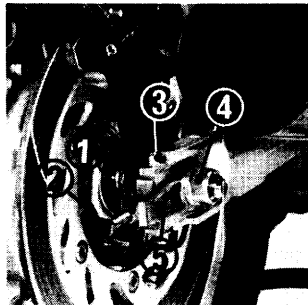

Dépose de la roue arrière

1. Placer la moto sur sa béquille centrale.
2. Desserrer les contre-écrous du tendeur de chaîne secondaire (1) et les boulons de réglage (2).
3. Retirer les boulons de fixation de butée (3) situés à l'extrémité du bras oscillant.
4. Desserrer l'écrou d'axe de roue arrière (4), tirer les boulons de réglage (2) vers le bas et déposer les butées de réglage (5).
5. Pousser la roue en avant et déposer la chaîne secondaire de la couronne arrière.
6. Retirer la roue du bras oscillant.