


Brakes

Front brake adjustment:

Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the free play distance that the front brake lever moves before the brake starts to engage. Free play, measured at the tip of the brake lever, should be maintained at 10–20 mm (3/8–3/4 in). Adjustments should be made using the adjuster (1) at the front wheel. Turning the adjuster in direction (A) will decrease the free play.

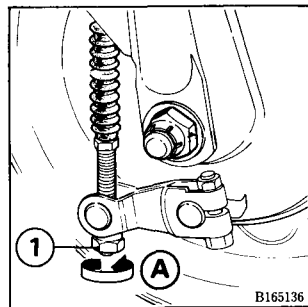

Frenos

Ajuste del freno delantero:

Levante la rueda delantera del suelo colocando un bloque de soporte debajo del motor, haga girar la rueda delantera a mano y mida el juego libre de la palanca de freno delantero antes de que el freno comience a engranar.

El juego libre, medido en el extremo o de la palanca de freno, deberá mantenerse de 10–20 mm. Los ajustes deben efectuarse utilizando el ajustador (1) en la rueda delantera. Gire el ajustador en la dirección de (A) y se reducirá el juego libre.