Audio System *(Continued)*

To increase the volume: push VOL lever up.

▶To increase the volume rapidly, push up and hold VOL lever.

To decrease the volume: push VOL lever down.

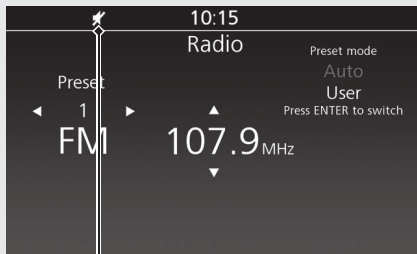▶To decrease the volume rapidly, push down and hold VOL lever.

VOLUME level range: Level 0 to 30

VOL lever

To mute the volume: Press and hold SOURCE switch.

▶A diagonal line appears in the audio output status icon on the screen.

10:15

Radio

Preset mode

Auto
Preset
User
◀   1   ▶   Press ENTER to switch
▲
FM   107.9 MHz
▼

Audio output status icon

To resume the volume: Operate VOL lever while volume is muted.