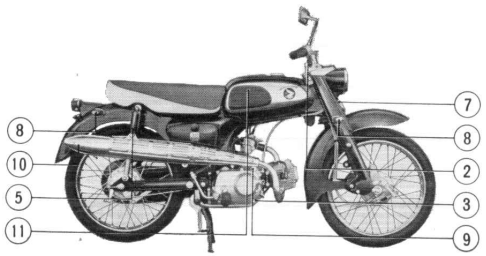

Figure 6-51. Daily inspection points on right side (S50, S65)

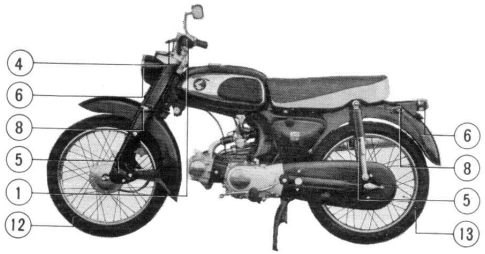

Figure 6-52. Daily inspection points on left side (S50, S65)

⑩ Check for unusual exhaust gas color.

⑪ Check fuel level.

C50, C50M : 3.0 lit (6.3 U.S. pt : 5.3 Imp pt)
C65, C65M : 4.5 lit (9.5 U.S. pt : 7.5 Imp pt)
S50 : 5.5 lit (11.6 U.S. pt : 9.7 Imp pt)
S65 : 6.5 lit (13.7 U.S. pt : 11.4 Imp pt)

⑫ Front tire air pressure.

Normal.....1.7kg/cm^2 (24.2 lb/in^2)
For loaded condition or for high speed riding
.....1.8kg/cm^2 (25.7 lb/in^2)

⑬ Rear tire air pressure.

Normal.....2.1 kg/cm^2 (30 lb/in^2)
For loaded condition or for high speed driving
.....2.3kg/cm^2 (32.8 lb/in^2)

(Note)

After inspecting the above items, attention should be paid to the following points when riding.

(1) After starting, warm up the engine for two minutes at low speed.
When the engine is cold, the viscosity of the oil is heavy and does not permit adequate lubrication to all the parts.

(2) Do not race the engine needlessly.

(3) Refrain from abrupt acceleration or braking, tight cornering.

(4) Change oil every 500 km (310 mi) during winter driving or when used mostly for short trips.

(5) Check battery electrolyte level weekly without fail. Under the following conditions, checks should be made at a more frequent intervals.
a. When riding more than 50 km (31 mi) daily.
b. Riding in mountainous area.
c. More frequent inspection is necessary when riding at high speed.

B. PERIODIC INSPECTION

Periodic inspection and servicing should be performed in accordance with the following table.

Items \ Distance Km / Miles	300 (180)	1,000 (620)	2,000 (1,240)	3,000 (1,860)	4,000 (2,480)	5,000 (3,100)	6,000 (3,720)	7,000 (4,340)	8,000 (4,960)	9,000 (5,580)	10,000 (6,200)	11,000 (6,820)	12,000 (7,440)
Change engine oil	●	●	●	●	●	●	●	●	●	●	●	●	●
Greasing				●			●			●			●
Adjust ignition timing				●			●			●			●
Adjust valve clearance	●			●			●			●			●
Adjust cam chain	●			●			●			●			●
Adjust clutch	●			●			●			●			●
Adjust carburetor				●			●			●			●
Adjust drive chain	●	●	●	●	●	●	●	●	●	●	●	●	●
Adjust front brake	●	●	●	●	●	●	●	●	●	●	●	●	●
Adjust rear brake	●	●	●	●	●	●	●	●	●	●	●	●	●
Clean spark plug				●			●			●			●
Clean oil filter	●						●						●
Clean air cleaner				●			●			●			●
Clean fuel strainer							●						●
Clean muffler				●			●			●			●
Inspect tightness of nuts and bolts	●						●						●
Inspect suspensions				●			●			●			●
Inspect lights, horn and speedometor				●			●			●			●