


5. Pass the chain over the sprockets and join the ends of the chain with the master link. For ease of assembly, hold the chain ends against the rear sprocket teeth while inserting the master link.

Install the master link retaining clip (6) so that the closed end of the clip will face the direction of forward wheel rotation. The master link is the most critical part affecting the security of the drive chain. It is recommended that a new master link retaining clip be installed whenever the drive chain is reassembled.

Install the master link retaining clip (6) so that the closed end of the clip will face the direction of forward wheel rotation.

6. Adjust the drive chain and rear brake pedal free play.

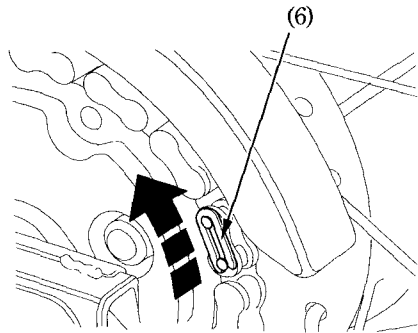

(6) Retaining clip