



6. Lower the jack under the engine to extend the fork springs with the attached filler plugs.
7. Move the fork springs to one side and pour 4.6–4.7 ozs. (135–140 cc) of premium quality ATF (automatic transmission fluid) into each fork leg.
8. Raise the jack under the engine to allow the fork springs and filler plugs

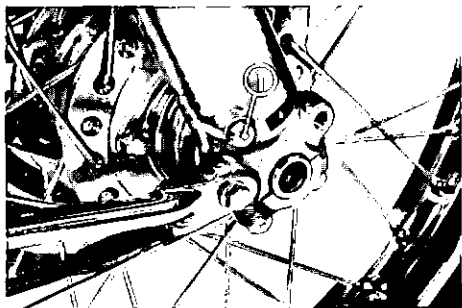

① Front fork drain plug

- to return into the fork legs.
9. Securely tighten the fork filler plugs ②.
10. Reinstall handlebar, tightening the two front bolts first, then securely tighten the two rear bolts.
11. Remove the jack from under the engine.

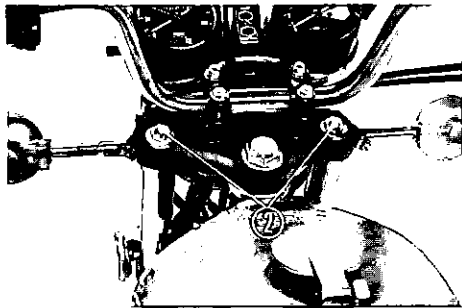

② Fork filler plugs