

**INSTALLATION**

Install the radiator assembly by aligning its grommet with the frame boss.

Install the collars and mounting bolts.




Install the upper radiator hose and tighten the band screw securely.



Install the lower radiator hose and tighten the band screw securely.

Connect the siphon tube.

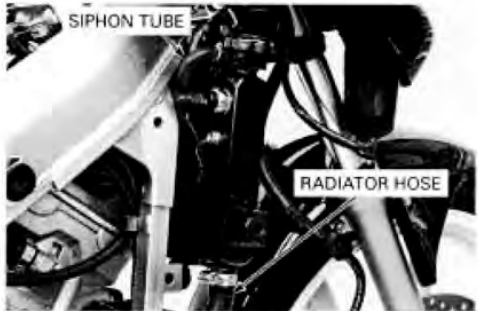

Connect the fan motor 3P connector.

Fill and bleed the cooling system (page 6-5).

Install the following:

- left middle cowl (page 2-4)
- fuel tank (page 5-3)

