

Connect the front brake switch connectors.



Install the left handlebar grip onto the handlebar (refer to page 14-5).


Install the grip end.

Tighten the grip end screw to the specified torque.

**TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)**

GRIP END

GRIP

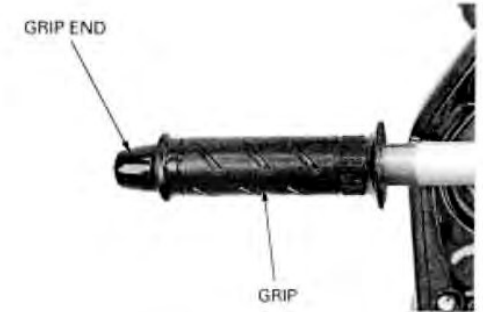

Install the left handlebar switch housing aligning its locating pin with the hole on the handlebar.



Install the screws and tighten the forward screw first, then the rear screw.

