


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the screw (low beam) (1) and screw (high beam) (2) in or out as necessary.

Obey local laws and regulations.

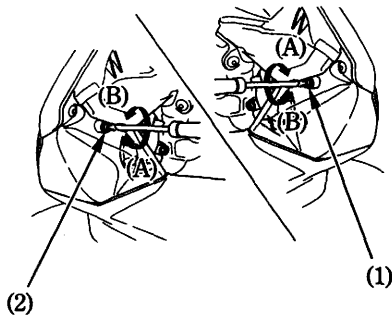

(1) Screw (low beam)
(2) Screw (high beam)

(A) Up
(B) Down