


6. Fill the crankcase with approximately 1.5ℓ (1.6 US quarts) of the recommended grade oil.
7. Install the oil filler cap.
8. Start the engine and let it idle for a few minutes.
9. Stop the engine. Make sure the oil level is at the upper level mark (3) in oil level inspection window (4). With the motorcycle on its center stand and that there are no oil leaks.

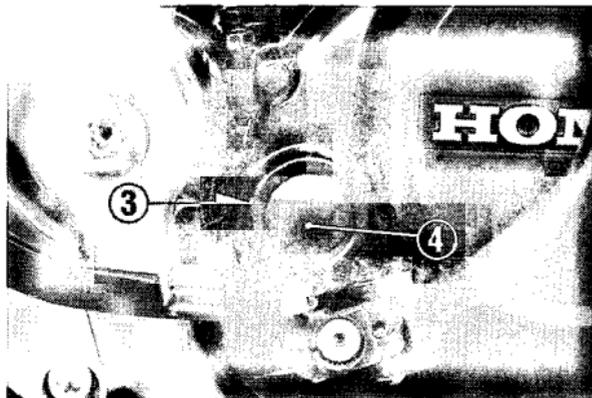

(3) Upper level

(4) Oil level inspection window

