## **Tool Kit/Document Bag**

The tool kit is located under the rear seat. Secure the tool kit with the rubber strap A (large-diameter) as shown in the illustration. The document bag is located under the front seat.

## Document bag Rubber strap A


## **U-shaped Lock**

A U-shaped lock is held in place above the rear fender.

- 1 Remove the rubber strap A (large-diameter) and tool kit from the rear fender.
- Place the U-shaped lock onto the rear fender, and then secure it by hooking the rubber strap B (small-diameter) at the three points as shown in the illustration.
  - Some U-shaped locks may not fit in the compartment due to their size or design.

## **Rubber strap B**

U-shaped lock

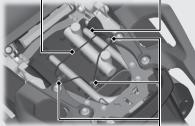

Hook points

continued 49

**Operation Guide**