



FRONT WHEEL/SUSPENSION/STEERING

INSTALLATION

Place the handlebar onto the lower holders, aligning the punch mark on the handlebar with the top of the lower holder.

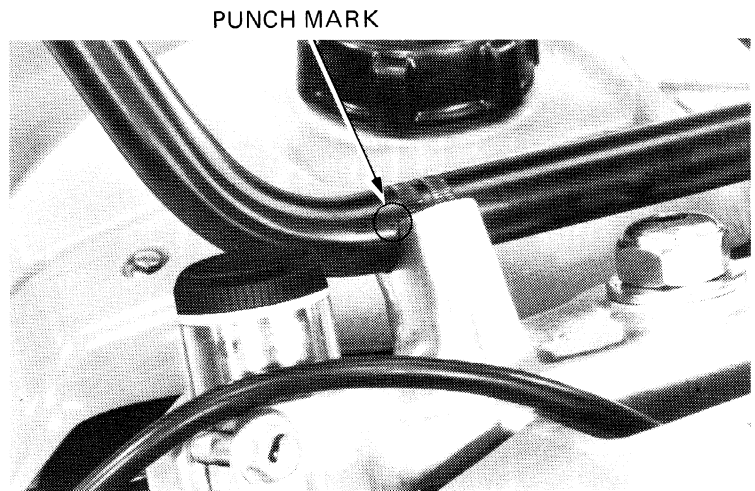

Install the handlebar upper holders with the punch marks forward. Tighten the front bolts first, then tighten the rear bolts.

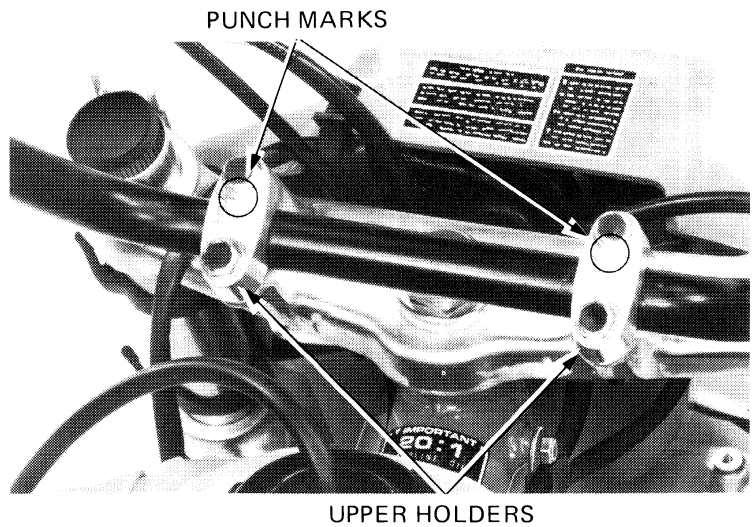

Install the switch housing on the handlebar and tighten the upper screw first, then tighten the lower screw. Install the handlebar switch wire bands.

