


Cargo Bed Controls

See page 54 for *Loading cargo* when driving with cargo on bed.

Tailgate Levers

Before lowering the tailgate, select a firm level surface and set the parking brake.

To lower the tailgate, pull each tailgate lever out and unhook the hook as shown below. Reverse the process to secure the tailgate in the upright position.

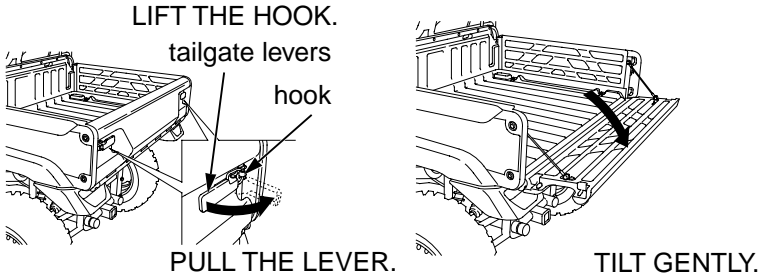

Do not drive the Honda MUV with the tailgate lowered.

Tie-Down Hooks

Before using the tie-down hooks, select a firm level surface and set the parking brake.

The cargo bed has four tie-down hooks for securing items in the bed.

