

● CHASSIS

1. BRAKE ARM

After putting the brake panel assembly on the wheel hub, install the brake arm on the brake camshaft, aligning the mark on the arm with index on the shaft. (Fig. 34)

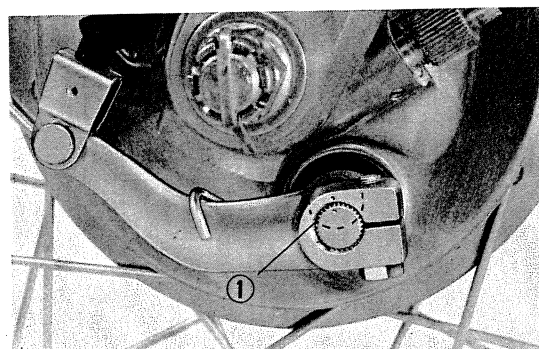


Fig. 34 ① Aligning marks

2. HANDLEBAR

Be sure and keep the punch mark on the handlebar flush with the top face of the holder as shown. (Fig. 35)

Note:

After making sure that the punch mark and top face of the holder match up, tighten the holder firmly, starting with the front toward the rear.

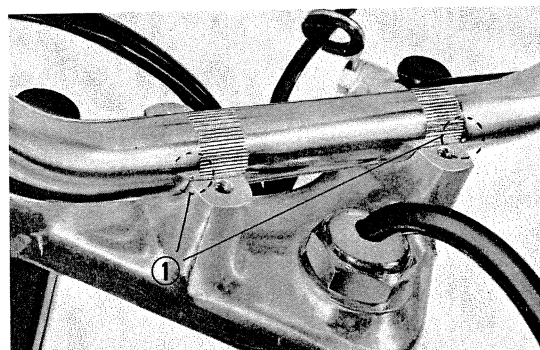


Fig. 35 ① Punch mark

3. CABLES AND LEAD WIRES

All cables and lead wires should be positioned as per the instructions given in Figs. 36 and 37.

Note:

Be sure that cables and wires are not binding or stressed when the handle is operated between two extremes.

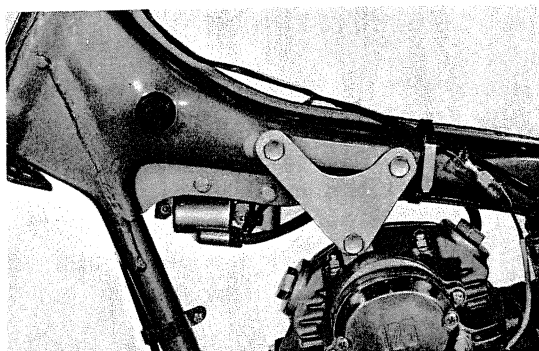


Fig. 36

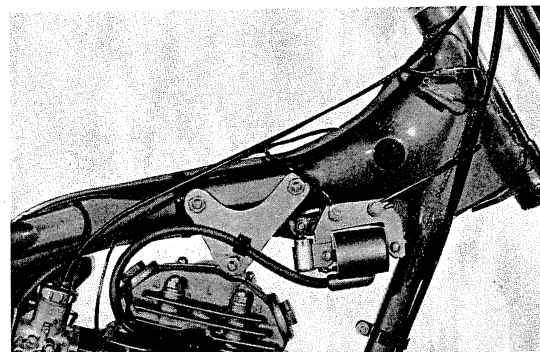


Fig. 37