



Connect the throttle cables to the carburetor bracket, adjust the throttle grip free play (page 3-4).

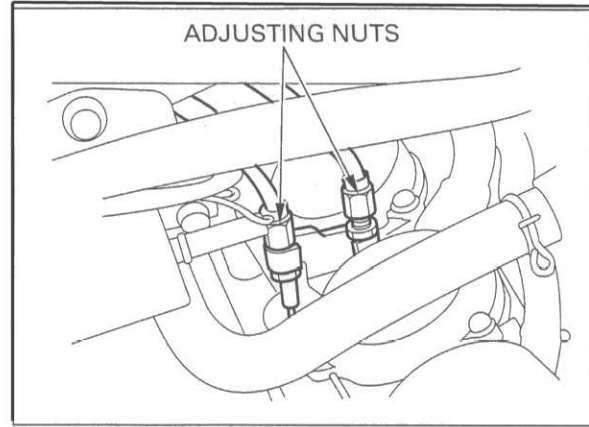

Install the master cylinder aligning the end of the master cylinder with the punch mark on the handlebar.
Install the master cylinder holder with the "UP" mark facing up.
Tighten the upper bolt first, then the lower bolt.

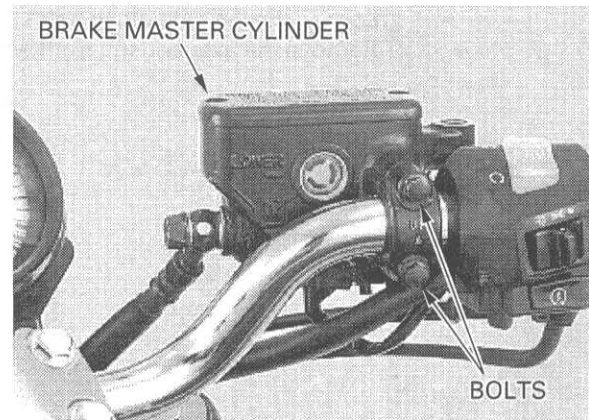


TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

Connect the brake switch wire connectors.

Install the rearview mirrors and tighten the nuts to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

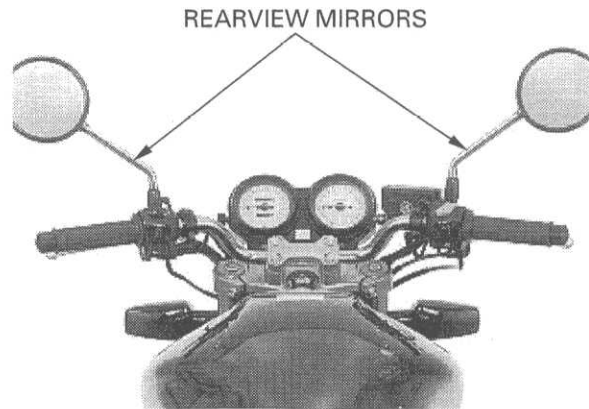

FRONT WHEEL

REMOVAL

▲WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

Support the motorcycle securely using a safety stand or a hoist.

Remove the mounting bolts and left brake caliper.

CAUTION:

Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose

NOTE:

Do not operate the brake lever after the brake caliper is removed.

