


Install the front fender and tighten the bolts to the specified torque.


**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

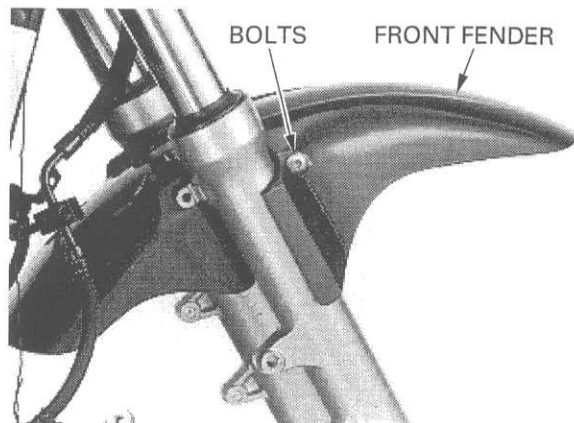

Install the both brake hose joint and tighten the bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the front wheel (page 13-14).  
Install the brake calipers (page 15-20)

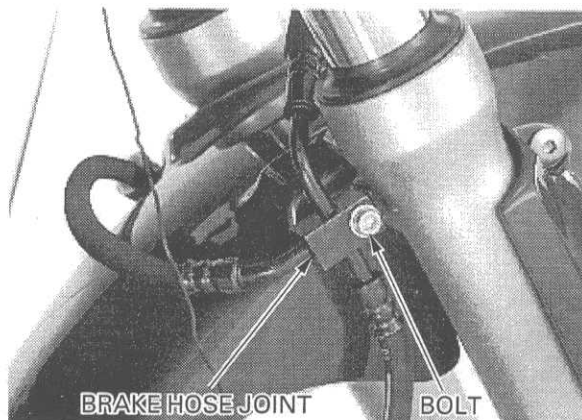


## STEERING STEM

### REMOVAL

Remove the following:

- Handlebar (page 13-3)
- Front wheel (page 13-9)
- Headlight case (page 19-3)
- Combination meter (page 19-5)
- Front brake calipers (page 15-18)

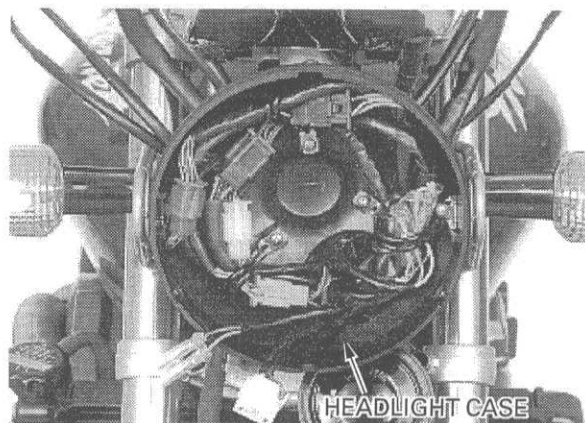

Remove the bolt and front brake hose clamp.  
Remove the bolt and horn unit.

