


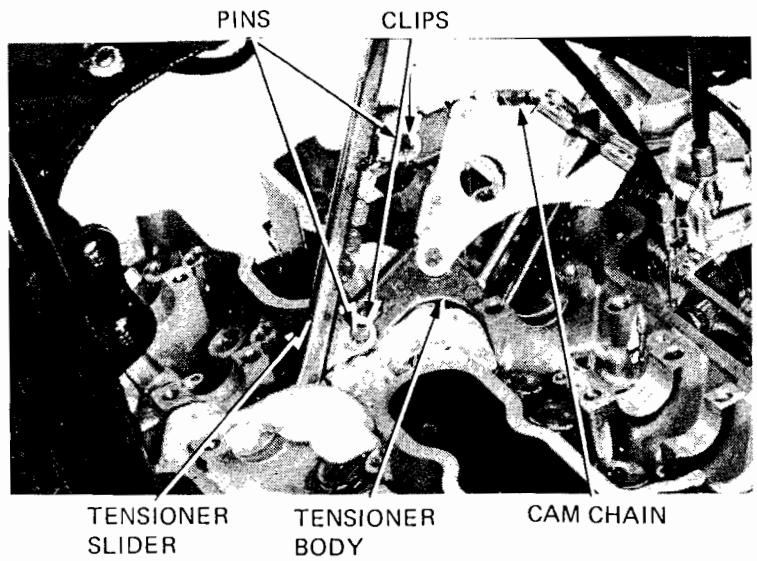

Put the cam chain over the tensioner body and install the tensioner slider with the clips and pins as shown.

**NOTE**

Be careful not to drop the pins and clips into the crankcase.



Tighten the cam chain tensioner with the four bolts.

**TORQUE:** 10–14 N·m  
(1.0–1.4 kg·m, 7–10 ft·lb)

Install the rear and lower engine mount bolts (Page 5-5).

