





## HYDRAULIC TAPPET INSTALLATION

Place the tappet in a jar filled with kerosene.  
 Place the tappet bleeder into the tappet.  
 Hold the tappet upright and pump the tappet until air bubbles stop coming out. Remove the tool, and try to quickly compress the tappet by hand. You should not be able to compress it more than 0.2 mm (0.008 in).  
 Remove the tappet from the fluid keeping it upright.

HYDRAULIC TAPPET BLEEDER  
 07973 - MJ00000

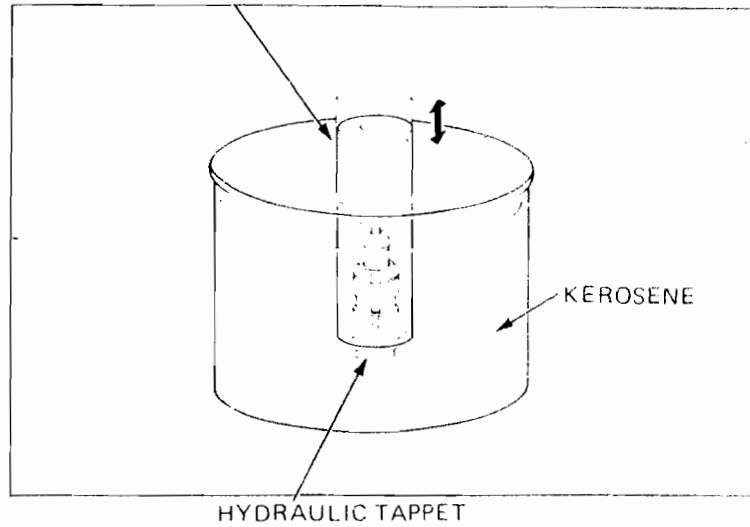

Fill all the tappet holes up with clean engine oil.  
 Install the bled hydraulic tappets as described in above procedure.

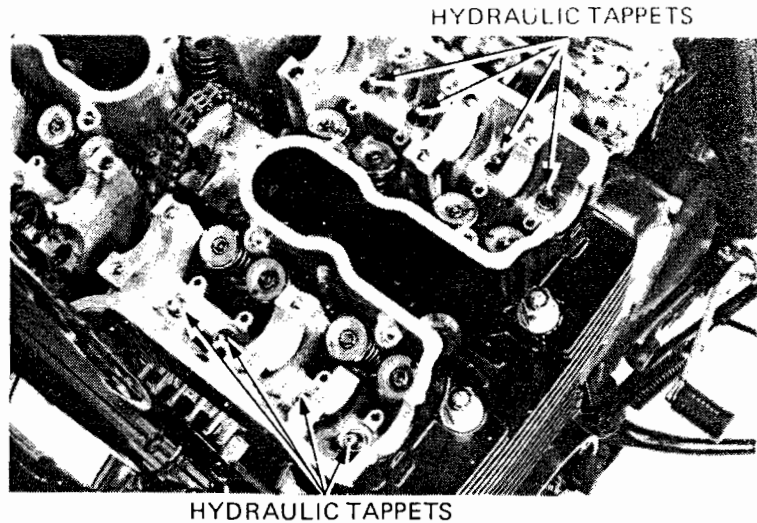

Install the dowel pins into the cylinder head.

