



Install the left handlebar switch spacer onto the left handlebar.

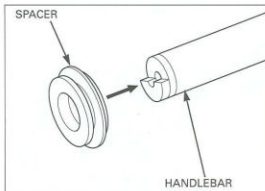

Apply Honda Bond A or equivalent adhesive to the inside of the grip and to the clean surfaces of the left handlebar and throttle grip.


Wait 3 – 5 minutes and install the grip. Rotate the grip for even application of the adhesive.

Allow the adhesive to dry for an hour before using.

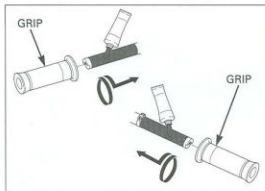

Install the grip end onto the inner weight, aligning its boss with the slot in the inner weight. Install a new grip end mounting screw to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

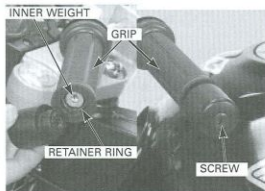

Install the spacer into the handlebar switch groove.

Install the left handlebar switch housing, aligning its locating pin with the hole in the handlebar.

