



Install the right handlebar switch/throttle housing by aligning its locating pin with the hole in the handlebar.


Apply grease to the throttle cable ends.  
Connect the throttle cables to the throttle grip.

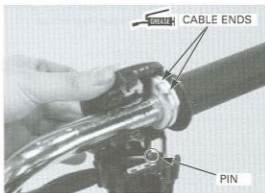

Tighten the forward screw first, then the rear screw.  
Install the grip end (page 13-7).

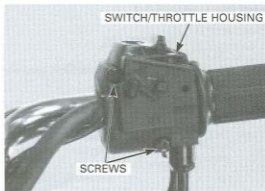

Adjust the throttle free play by turning the adjuster and tighten the lock nut.  
Recheck the throttle operation (page 3-4).

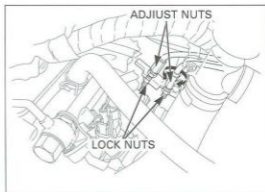

Install the master cylinder by aligning the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.  
Tighten the upper bolt first, then tighten the lower bolt.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

