

REAR WHEEL/SUSPENSION

Press out the needle bearing out of the shock absorber lower mount using the special tools.

TOOLS:

Driver

04949-3710001 or


07946-MJ00100

Attachment, 22 X 24 mm

07746-0010800


Pilot, 17 mm

07746-0040400

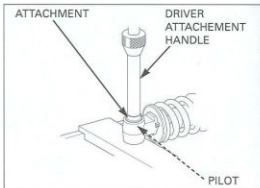

Press the needle bearing into the lower mount with the lower marked side facing out.

Press a new needle bearing into the lower mount so that the needle bearing surface is lower 7.4 – 8.0 mm (0.29 – 0.32 in) from the end of the lower mount using the same tools.

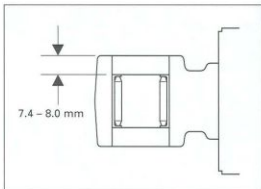

Apply grease to the new dust seal lips, install them into the lower mount.
Install the pivot collar.

