


Remove the pad pin.  
Remove the caliper bracket bolt.

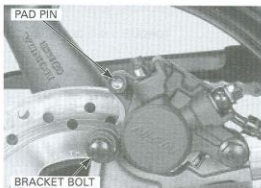

Pivot the caliper up.  
Remove the pad pin and brake pads.

Install the new brake pads.



*Make sure the  
brake pad spring  
is in place.*

Lower the caliper while pushing the pads against the pad spring so that the pad ends are positioned onto the retainer on the caliper bracket.

Install the pad pin.



Install and tighten the caliper bracket bolt.

**TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)**

Tighten the pad pin.

**TORQUE: 17 N·m (1.7 kgf·m, 12 lbf·ft)**

