



## MAINTENANCE


Connect the vacuum hose to the variable air intake diaphragm.

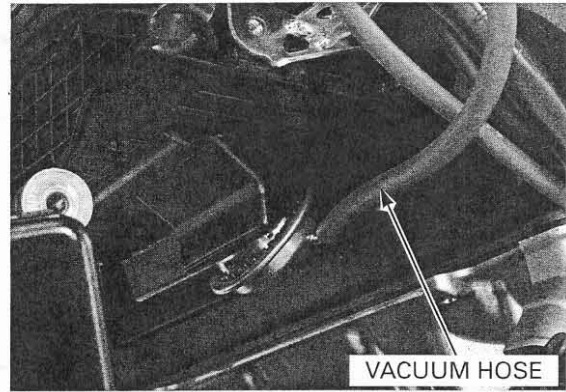

Install the air intake grill and secure it with trim clips.

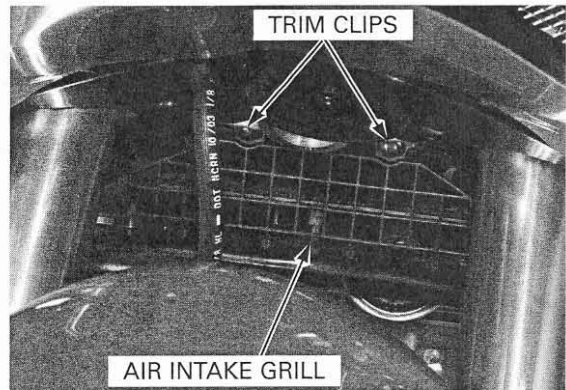

Install the radiator onto the bracket while aligning the grommet and frame boss.

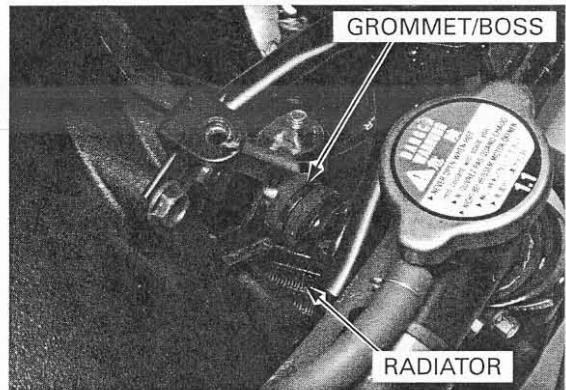

Install and tighten the radiator upper mounting bolt.

