



Install the drive chain slider aligning its tabs with the holes in the swingarm.

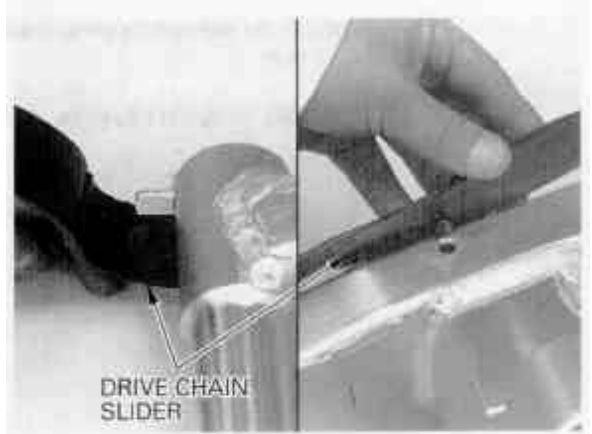

Apply a locking agent to the drive chain slider bolt threads.
Install the collars and bolts, then tighten the bolts to the specified torque.

TORQUE: 9 N·m (0.9 kgf·m , 6.5 lbf·ft)


Install the drive chain adjusters.

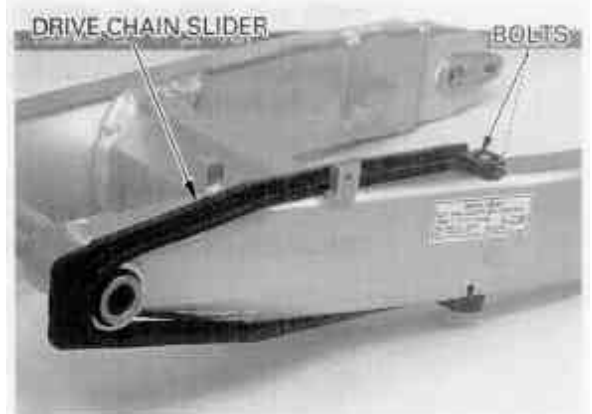

INSTALLATION

If the end of the adjusting bolt does protrude, it will not be possible to install the swingarm.

Install the swingarm adjusting bolt.
Be sure that the tip of the bolt does not protrude inward.

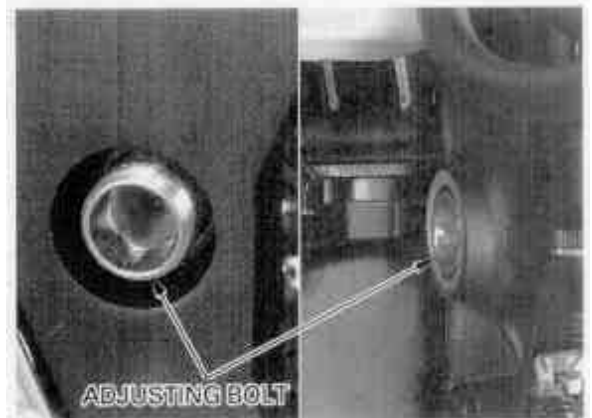

Apply thin coat of grease to the swingarm pivot bolt surface.
Install the swingarm and pivot bolt.

Push the pivot bolt's hex shank into the adjusting bolt's socket head.
Screw the adjusting nut by turning the pivot bolt.

