


Temporarily install front forks
Temporarily install handlebars to front
forks
Install fork top bridge
Install washer stem nut and tighten

Torque : 9.0-12.0 Kg-m

Special Tools:

Lock nut wrench (30x32) 07716-0020400


Extension bar 07716-0020500

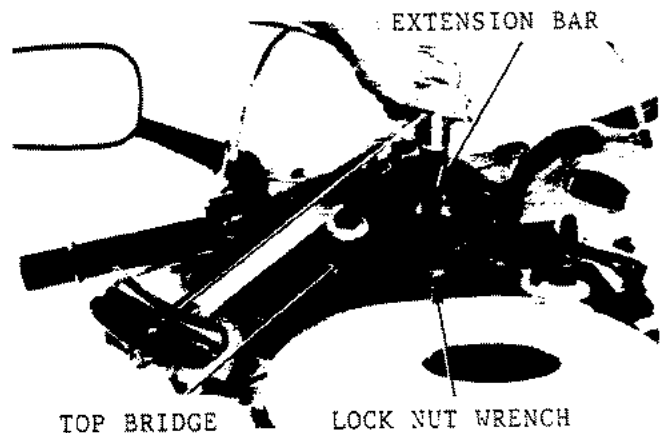

Install front forks properly (12.17)
Tighten top bridge bolt

Torque : 0.9-1.3 kg-m

Install handlebars (12.3)
Install front wheel (12.9)

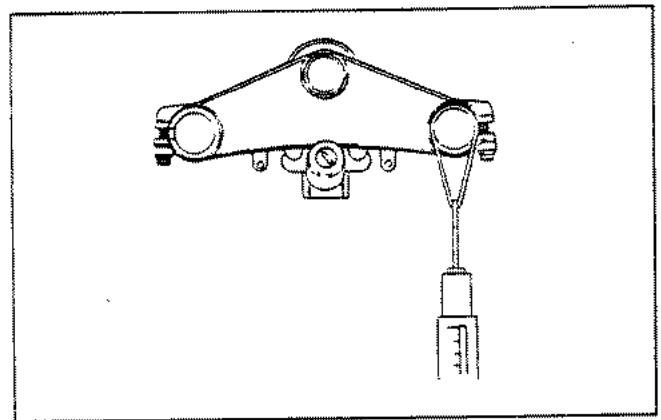

STEERING STARTING WEIGHT

Raise frame and lift front wheel off
ground
Hang scales from front fork pipe and
measure the weight required to move
steering

- * Do not hook up cables and wire harness
on ste,
- * Turn steering top bridge and pull 90°

If it takes 1.0-1.5kg to move forks from
left to right it is okay.