


## SHOCK ABSORBER

### REMOVAL

#### NOTE:

Remove one shock absorber at a time to facilitate removal and installation.


Remove the muffler mounting bolts and loosen the clamp bolts. Pull the muffler slightly toward the rear.

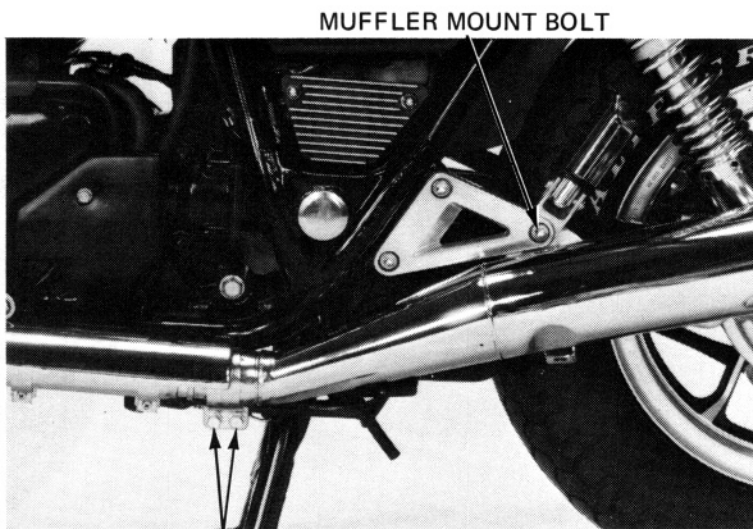

CALMP BOLTS

Adjust the shock absorber to the softest position.

Remove the shock absorber upper and lower mounts and remove the shock absorber.

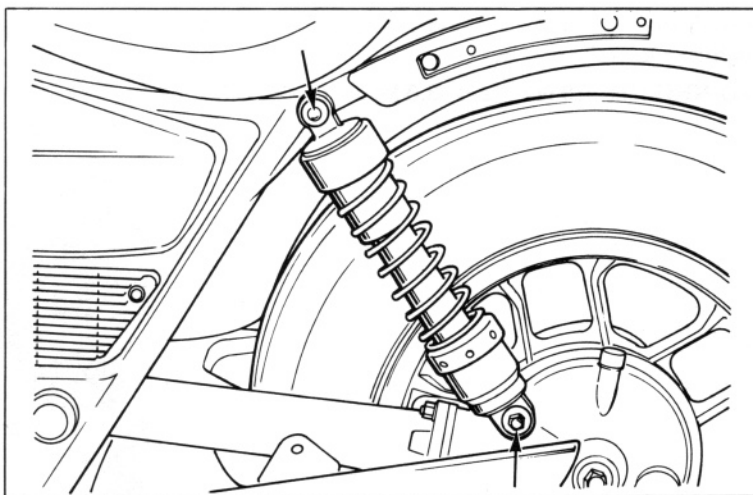

### DISASSEMBLY

Replace base and guide of shock compressor, P/N 07959-3290001 with attachments, 07959-MB10000.

Place the collar P/N 52486-463-0000 or equivalent in the shock's bottom joint before putting the shock in the compressor.

Set the shock in the compressor as shown and compress the spring 30 mm by turning the compressor handle.

#### CAUTION:

*Be sure the base is adjusted correctly for the shock spring seat and the clevis pin is all the way in.*

