


INSTALLATION

Install the shock absorber in the frame with the rebound damping adjuster facing to the right. Install and tighten a new upper mounting bolt.

TORQUE: 44 N·m (4.5 kgf·m , 33 lbf·ft)

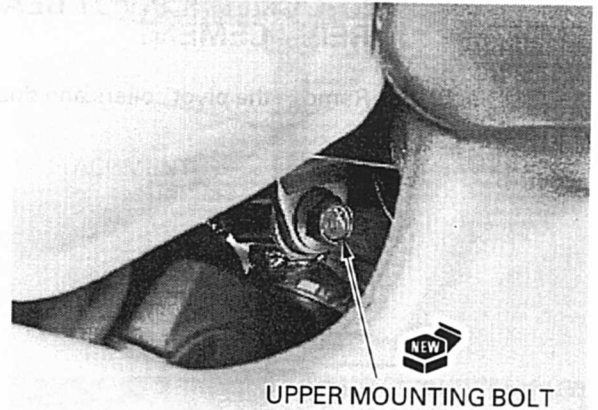


Install the lower mounting bolt and tighten the nut.

TORQUE: 44 N·m (4.5 kgf·m , 33 lbf·ft)

Install the shock arm-to-shock link bolt and tighten the nut.

TORQUE: 44 N·m (4.5 kgf·m , 33 lbf·ft)

Install the exhaust pipe and mufflers (page 2-6).

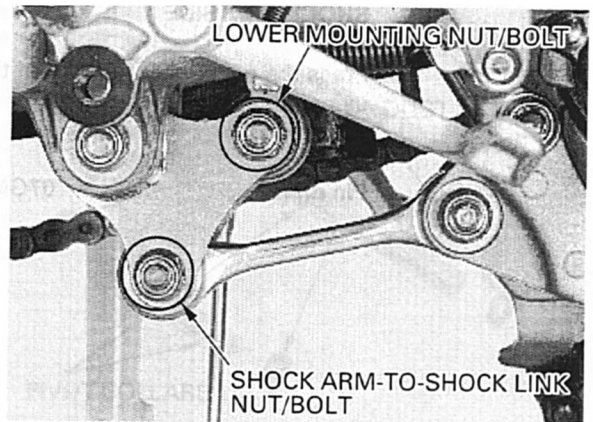

SUSPENSION LINKAGE

REMOVAL

Support the motorcycle securely with a hoist or equivalent.

Remove the exhaust pipe (page 2-5).

Remove the following:

- shock arm-to-shock link nut and bolt
- shock link-to-bracket nut and bolt
- shock link

- shock arm-to-swingarm nut and bolt
- shock absorber lower mounting nut and bolt
- shock arm

