




Install the boot into the master cylinder.

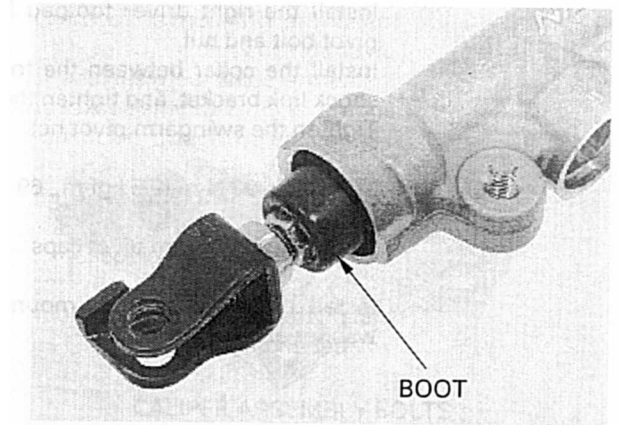

Coat a new O-ring with brake fluid and install it into the master cylinder.

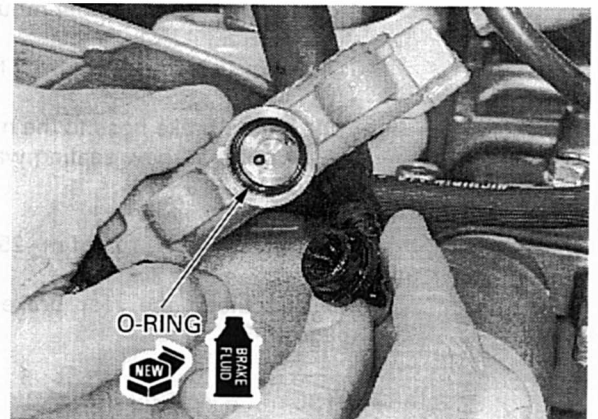

Install the reservoir hose joint and secure it with the snap ring.

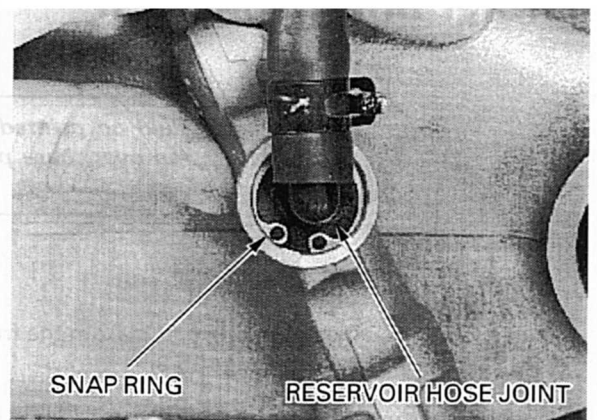

Connect the master cylinder push rod joint to the brake pedal with the joint pin and a new cotter pin.

Apply grease to the brake pedal pivot.

Connect the rear brake light switch spring to the brake pedal.

Install the brake pedal onto the pivot shaft.

Install the washer and snap ring onto the pivot shaft.

Connect the pedal return spring.

Install the master cylinder mounting bolts.

